



Electric SPA Wellness Table

Faro Balance

SVX-10658-xx/xx (2259A/2259AH)

Faro Comfort

SVX-10657-xx/xx (2259/2259+/2259H)

Faro Comfort 2

SVX-10652-xx/xx (2259V)

iM3 s.r.o.
Malotejedská 515/8
929 01 Dunajská Streda
Slovakia

Fabulo.sk - Fabulo.cz - Fabulo.hu - Fabulo.ro

Welcome to use our products. A3
Please read the user manual carefully before using the products.
Our company reserves the right to improve design and modify
the products without prior notice.

1. About This Manual


This manual shall only be used for the reference of operation of this particular model. If the manual is used for other purposes, we will not undertake any according consequences and responsibility. All information of this manual shall be protected by copyright and shall not be copied and translated in any part of this specification without the written consent of manufacturer.

2. Warning

- Power must be cut off when changing electrical components or maintaining and cleaning machines.
- The plug must be plugged into an outlet that is properly installed and grounded, to prevent the risk of fire and electric shock.
- Do not stand on this equipment.
- Do not allow children to play with and place the equipment in a place where children can touch. Please adjust the backrest to the highest position when you leave.
- Please do not place the equipment in wet places such as bathroom to avoid electric shock or other failure; Also keep the controllers away from water.
- Please do not place and operate the equipment in places where is painting/coating or supplying oxygen.
- Unless being monitored or instructed by personnel who can be responsible for their personal safety, the people who have physical obstacles, tactile disorders, mental disorders, lack of experience, common sense or children, are not allowed to use the equipment.
- Please contact distributor, service center or related personal with appropriate skill and experience for repairing if the plug is damaged, in case of any danger.
- Please make sure there is no accessible thing within the stroke during any operation of the beds.
- Operation should be processed by trained professionals.

3. Precautions

- This product should be used by an experienced person who must be familiar with the product structure, performance and instructions. And make the regular maintenance work.
- Read this manual carefully before installation, operation and adjustment. And please keep it well.
- This product shall not be used for single side or single point loading work.
- Comply with safety operation rules, product shall not be overloading, and to ensure that the product safety protection equipment is complete and reliable, eliminates unsafe factors on time.
- Tighten bolts and nuts regularly to avoid failure caused by loose, sliding, vibration and falling off.
- During the maintenance, the operator shall not disassemble any parts of the bed at will.
- This product is not allowed to operate when it's with fault. If abnormal phenomenon or abnormal sound is found, it must be stopped for inspection immediately, and work can be resumed after troubleshooting.
- The operator must be familiar with the precautions described in each section of the manual to ensure the safety of person and product.
- This product is equipped with a three-wire power cord. The power cord must be plugged into a three-hole outlet which is properly installed and grounded. This is not only to prevent the risk of electric shock, but ensure product can work properly.
- Please operate the product strictly accordance with the warning label stamped on it.
- While controlling the lifting, the button must be pressed continuously until the product in a suitable position.
- Please pay attention that the continuous working times should be Max. 2Min. ON ; 18Min. OFF, when operating the motor.
- Maintenance should be processed by trained professionals.
- After every treatment, please only use neutral solution to clear the dust or stains on the product.
- When adjusting each part, please keep your hands, feet and head away from the position indicated by the arrow. (As shown in the photo)

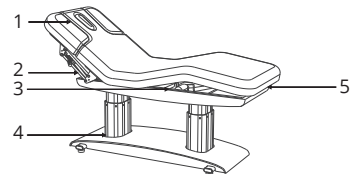

4. Installation


1. Put the product to a proper location, according to the overall layout, the daylighting or artificial lightings and operation condition of the salon's or the home. And keep it in the clean, dry and cool environment.
2. Open the packing carton to check if the product is intact and whether the accessories or spares are complete. Please contact distributor or us if there's any problem.

3. Installation

Place the product to the proper position. Please note that it is unnecessary to install extra screw on the floor to fasten the bed, because the original design has taken the stability into consideration.

But please ensure the product is placed on a firm and flat ground, so as to prevent any accident. If the product rotates or slant due to rough ground, please adjust the four pieces of plastic feet (M10×30) and nuts (M10) by hexagon open-end wrench, which are fasten on the bottom panel, so as to ensure the product is stable.


4. Connect the plug of product with power supply properly. (As shown in the photo)

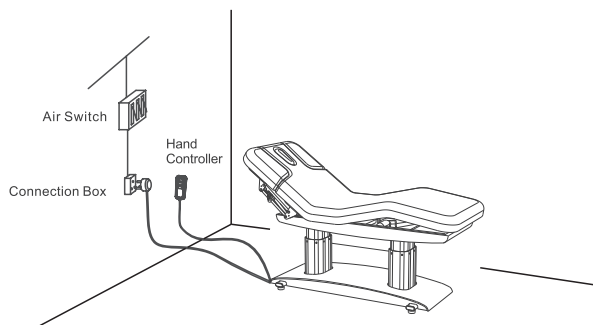

5. Structure of products


- This product consists of control box, motor, wooden part, hardware, plastic parts and leather. Among them, the control box is controlling the operation of the motors and the hand controller.
- This product includes angle adjustment of the backrest, angle adjustment of the seat cushion and lifting adjustment which is an overall and integral structure. (As shown in the photo)

Faro Comfort

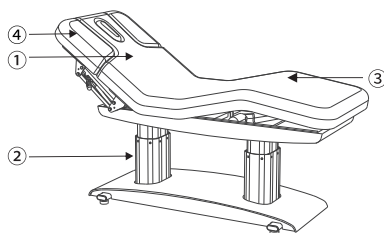


- ① angle adjustment of the backrest
- ② lifting adjustment
- ③ angle adjustment of the footrest
- ④ armrest angle adjustment (manual)

Faro Balance

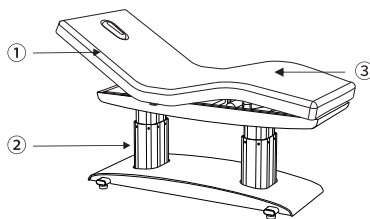

- ① angle adjustment of the backrest
- ② lifting adjustment
- ③ angle adjustment of the footrest


Faro Comfort 2

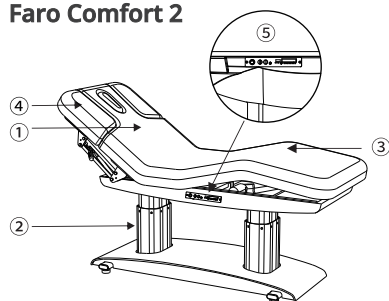

- ① angle adjustment of the backrest
- ② lifting adjustment
- ③ angle adjustment of the footrest
- ④ armrest angle adjustment (manual)
- ⑤ Vibroacoustic therapy system

6. Operation Instruction

Standard Configuration (Hand Controller)

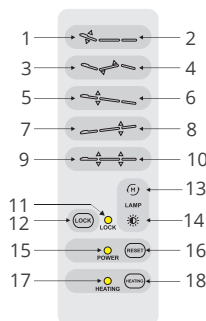

No.	Description	Operation
1	Backrest goes up	Backrest goes up smoothly by pressing the button.
2	Backrest goes down	Backrest goes down smoothly by pressing the button.
3	Footrest goes up	Press the button, footrest will move up, its angle will be reduced to minimum.
4	Footrest goes down	Press the button, footrest will move down, its angle will be moved to maximum.
5	Tilts up at positive angle	Inclined angle of the product increases smoothly in positive direction by pressing the button.
6	Tilts down at positive angle	Inclined angle of the product decreases smoothly in positive direction by pressing the button.
7	Tilts up at negative angle	Inclined angle of the product increases smoothly in negative direction by pressing the button.
8	Tilts down at negative angle	Inclined angle of the product decreases smoothly in negative direction by pressing the button.
9	Lifts up	Whole chair/table lifts up smoothly by pressing the button.
10	Lifts down	Whole chair/table lifts down smoothly by pressing the button.

11	Lock button indicator light	Keep pressing the "lock button" for about two seconds, lighting up the green light , all the buttons can not be operated except lock button.Keep pressing the lock button for about two seconds again, the green indicator lights off , all the buttons return to normal operation status.
12	Lock button	
13	 Mode switch for LED light	1. Press  key to turn on the LED light. 2. Long press  key for 2 seconds to turn off the LED light. 3. Short press  key to switch the LED light mode (total 6 colors and total 14 modes) in sequence. The LED light will be off after 14 modes switching. (Note: When power off and restart it, LED light will be maintained as the mode before shutdown.)
14	 Brightness control for LED light	Total 12 levels of brightness. Short press once to adjust a gear, long press can continuously adjust gear; Brightness from small to large, or from large to small cycle change, brightness to the maximum or minimum flashing light twice, and then reverse direction change.
15	Power indicator	Hand controller are connected with power supply properly, indicator light is on. Otherwise,the light should be off.
16	One-key reset button	Press the button, the height of the bed will automatically reach the lowest position.
17	Indicator light of heating function	Pressing the button, the light is on, the heating function works; pressing the button again, the light is off, the heating function stops working.
18	Heating button	

Notes:

- 1.The heating function is only available for the models with heating function.
- 2.Different hand controllers should be chosen according to different configuration.

7.VTS Control Panel

Faro Comfort 2



- 1.Press POWER button to start the vibroacoustic therapy system;
- 2.Press MOED button to select the play mode (USB, TF, AUX, MP3, FM, BLUETOOTH, etc.).


ICON	Function
POWER	Power switch
BASS	Bass speaker (vibro-acoustic performance)
VOLUME	Volume knob
USB	USB port
TF	TF card slot

ICON	Function
AUX	Audio input
PLAY	Play / Pause
VOL-	Hold: Volume up / down
VOL+	Press: Previous / Next
MODE	Switch mode


8. Technical Parameters

Power	AC 100-120V or AC 220-240V or AC 100-240V, 50/60Hz
Maximum Power	300W
Environment Temperature	0°C~+40°C
Relative Humidity	30%~90%
Lifting Rated Load	175kg
Package Size	204×81×72cm(Faro Comfort/Faro Comfort 2) 204×87×72cm(Faro Balance)

Faro Comfort/Faro Comfort 2

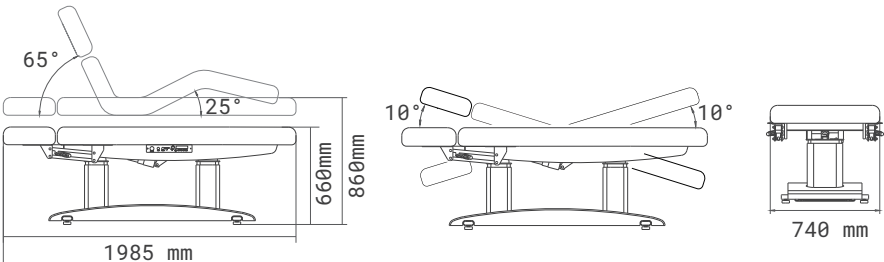


Faro Balance

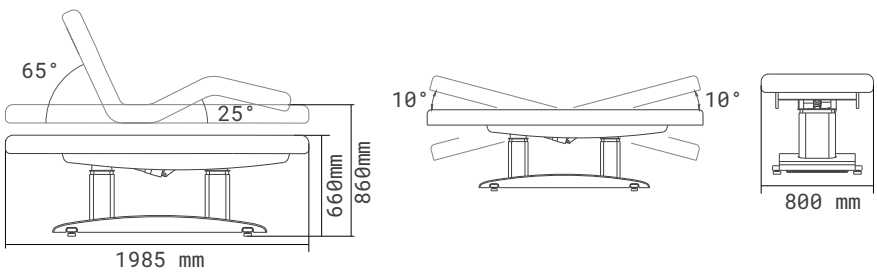

9. Maintenance

- 1. After every treatment, please only use neutral solution to clear the dust, stains on leather, metal part or other parts. Disinfecting solution like alcohol, acid or alkaline solution are forbidden. This is to prevent the lifetime of the components from being shortened.
- 2. Please lubricate the moving parts regularly (once a year)
- 3. After usage, please stay the upholstery flat to 180° to avoid folding and wrinkles.

10. Circuit Diagram

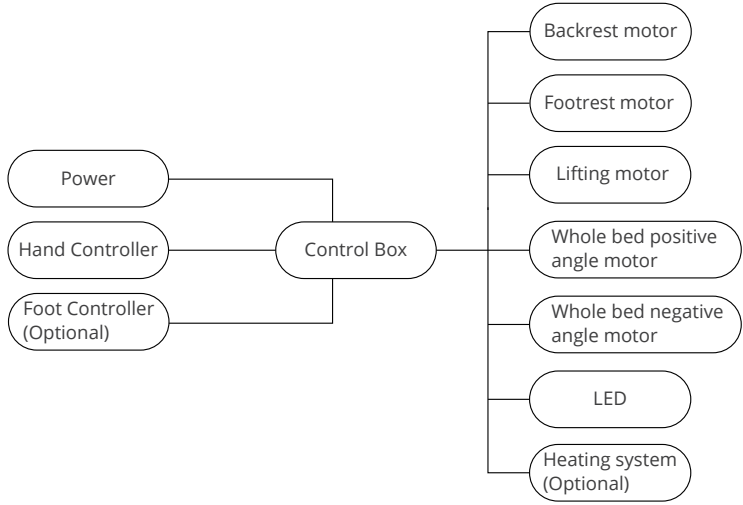

11. Troubleshooting

The Fault Phenomenon	Reason	Solution
motor can't work normally	1. The power cord is unconnected or not plugged well.	Connect the power cord or plug it well.
	2. Poor quality of the hand controller or foot controller.	Replace the hand controller or foot controller.
	3. Poor quality of the control box.	Please contact maintenance center or supplier for troubleshooting.
	4. Repture of motor tail.	
	5. Motor was damaged.	
	6. Emergency Switch has been pressed but not reset.	Reset the emergency switch.
Abnormal Sound	1. The rotating parts are short of lubricating oil.	1. Add lubricating oil.
	2. Rotating positions (such as hinge, POM sets, gas lift) are short of lubricating oil.	2. Add lubricating oil.
	3. Motor quality problems.	3. Replace the motor.
VTS Error	1. Input/output connection error.	1. Double check the connection of input/output.
	2. VTS control box error.	2. Replace the defective parts.
	3. Poor quality of the audio speaker.	3. If problem is still not solved, please contact maintenance center or supplier for troubleshooting.

If problem is still not solved after above operations, please contact maintenance center or supplier to solve it.



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

▲ Please check the product specification before use. This manual is for reference only. Specifications are subject to change without prior notice.